

Ribbon Cable Tester

User Manual

Model: 258894




Hobbes Computer Network Accessories

www.hobbes-usa.com

Introduction:

Do you have any headache to find the problems of your computer system? It may be caused by your configuration set up or just a simple ribbon cable problem. The Ribbon Cable Tester is considerably designed to test most used ribbon cables for wires continuity, open, short and miss-wiring. An intelligent CPU can memory a standard wire configuration and enables a mass production of cable assembly to be tested efficiently. Good for system integrators to save a half of expensive repair time and money or for the cable assembly houses saving to buy a highly expensive cable tester.

Product Profile:

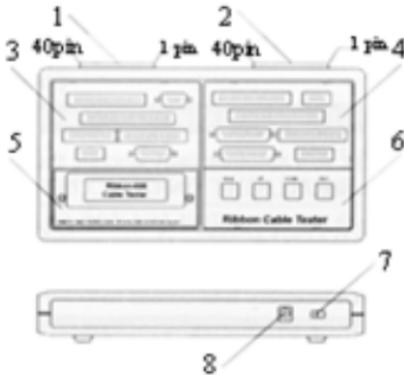

1. A SIDE (INPUT) 40 PIN EXTENSION PORT
2. B SIDE (OUTPUT) 40 PIN EXTENSION PORT
3. A SIDE (INPUT) CONNECTORS
4. B SIDE (OUTPUT) CONNECTORS
5. LCD DISPLAY
6. KEY BUTTONS
7. POWER ON/OFF SWITCH
8. 9V DC 150mA 2.50 POWER JACK

Features:

- Can test most used ribbon cables for wires continuity, open, short and miss-wiring.
- An intelligent CPU can memory a standard wire configuration for quick test.
- A backlight liquid crystal display enables you to easily read the tested results in any working environment.
- It provides two 40pin extension ports. Allows you to test most used of PC or Macintosh interfaced cables with optional PC/MAC Cable Test units.
- Save your expensive repair time or to buy an expensive cable tester.

Specifications:

- Input - IDC50 male, IDC40 male, IDC34 male, IDC26 male, IDC10 male, DB15 male & DB9 female.
- Output - IDC50 male, IDC40 male, IDC34male, IDC16 male, IDC10 male, DB25 male & DB25 female.
- Control Switches - Read, Test, Up & Down
- Display - Liquid crystal display with backlight
- Extension ports - 2x40 pins IDC male connectors
- Power - 9V DC Battery or 110/220V to 9V DC 150mA, 2.50 power jack
- Size - 250Lx134Wx35H(mm), (9.9" x 5.3" x 1.38")
- Weight - 800gr (1.761bs)

Operation:

Read a cable

1. Slide the power switch on. The tester will automatically operate the self-test and LCD display will show "LCD BACKLIGHT ON/OFF CONTROL"
2. If you are going to enable the LCD BACKLIGHT, push any switch once except READ switch. If you are going to disable LCD BACKLIGHT, push the READ switch once. Then the LCD display will comes to "Ribbon-666 * Cable Tester*"
3. Connect one end of tested cable on the corresponding connector of the left side test interface and another end to the right side.
4. Press the READ switch once, the LCD display will show "***Reading...**" then shows "---END---" after the tester completes the read.
5. If you want to read the pin configuration out, you may press UP or DOWN switch to read it out.

Mass cable test

1. If you want to test the same cables in mass quantity (more than 2 pieces), read a standard cable as above read cable procedures.
2. After reading a standard cable, connect the tested cable on the tester properly.
3. Press the TEST switch once, the test job is proceeding and LCD display will show “*Test Mode*”
4. After the test is completed, the LCD display will show “---pass---” with one “Beep” sound, then display will come back to “Ribbon-666*Cable Tester*”
5. If the test result is error, the LCD display will show “---Error!---” with three “Beep” sound, then display will come back to “Ribbon-666*Cable Tester*”
7. If you want to read the error out, press UP and DOWN to show the error up.


How to read the LCD display:

Examples:

LCD display	Explanation
1. Read cable wire map and show it by up and down switch	
Reading...	The tester is reading the wire map.
****Empty****	All the wires are disconnected
A01-B01 A02-B02 A03-B03.....	All the wires are connected by pin to pin
A01-B01 A02-B02 A03-B03.....	Pin 1 and pin 2 are crossed
A01-B01 A02-B02 A04-B04.....	Pin 3 is open
2. Test a cable to compare with a read standard cable	
--Pass!--	The wire map is completely the same as the standard cable.
--Error!--	The wire map is different from the standard cable.
3. Show the error by up and down switch	
"0": A01-B01	Pin 1 is open
"S": A01-A02	Pin 1 and pin 2 are shorted
"S": A01-B02	
"0": A01-B01	Pin 1 and pin 2 are crossed
"S": A01-B02	

Remarks:

1. Please don't connect the tested cable to the same side of the test interface.
2. The tester did not test the ground unless the extension test is applied to
1. PC Interface Test Unit together. In this application, the pin 40 means ground.
2. Two 40 pins IDC connector's allows to be connected with extension PC/MAC Cable Test Interface Unit. (Fig.2)
3. If you are going to use the tester in the same place for a long time, the optional power adapter instead of the battery is recommended.
4. Don't open the box by yourself if the tester does not work properly. Suggest your return it to the original dealer for maintenance.



(Fig.2)